


**Air by-pass solenoid:**  
Mount air by-pass solenoid vertically, alloy base down.  
(for maximum RPM mount close to throttle body)

From Air Filter

ⓘ **NOTE!** If the vehicle is fitted with a mass air flow meter, the air by-pass must be sourced from the engine side of this sensor.

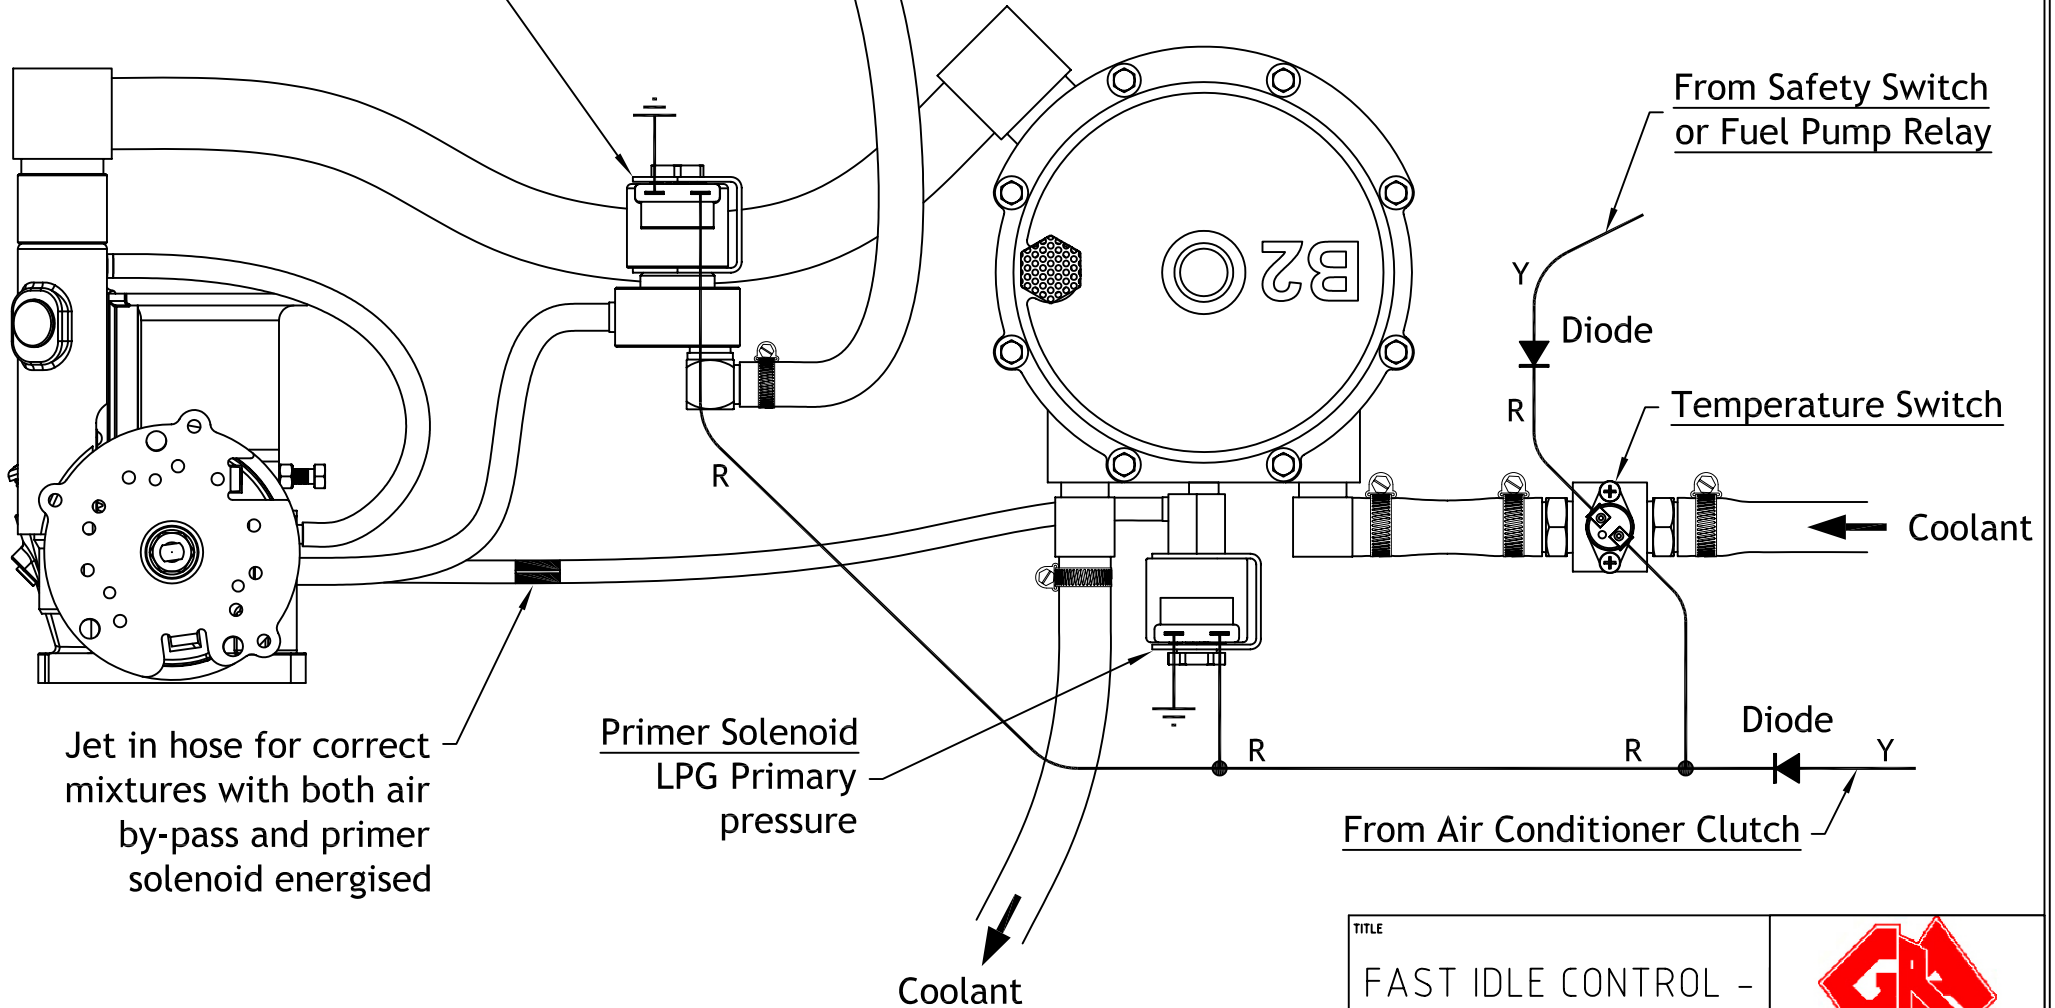

From Safety Switch or Fuel Pump Relay

Y  
Diode  
R

Temperature Switch

Coolant

Diode

From Air Conditioner Clutch

Jet in hose for correct mixtures with both air by-pass and primer solenoid energised

Primer Solenoid  
LPG Primary pressure

Coolant

TITLE  
FAST IDLE CONTROL -  
NON C.T.I.



DATE 17/06/04	PART NO HAR-FIWOCI	DRAWING NO IN-0013	DRAWN BY S.VALLELY	SHEET 1 / 1
------------------	-----------------------	-----------------------	-----------------------	----------------