


Air by-pass solenoid:

Mount air by-pass solenoid vertically, alloy base down. (for max. RPM mount close to throttle body)

NOTE! If the vehicle is fitted with a mass air flow meter, the air by-pass must be sourced from the engine side of this sensor.

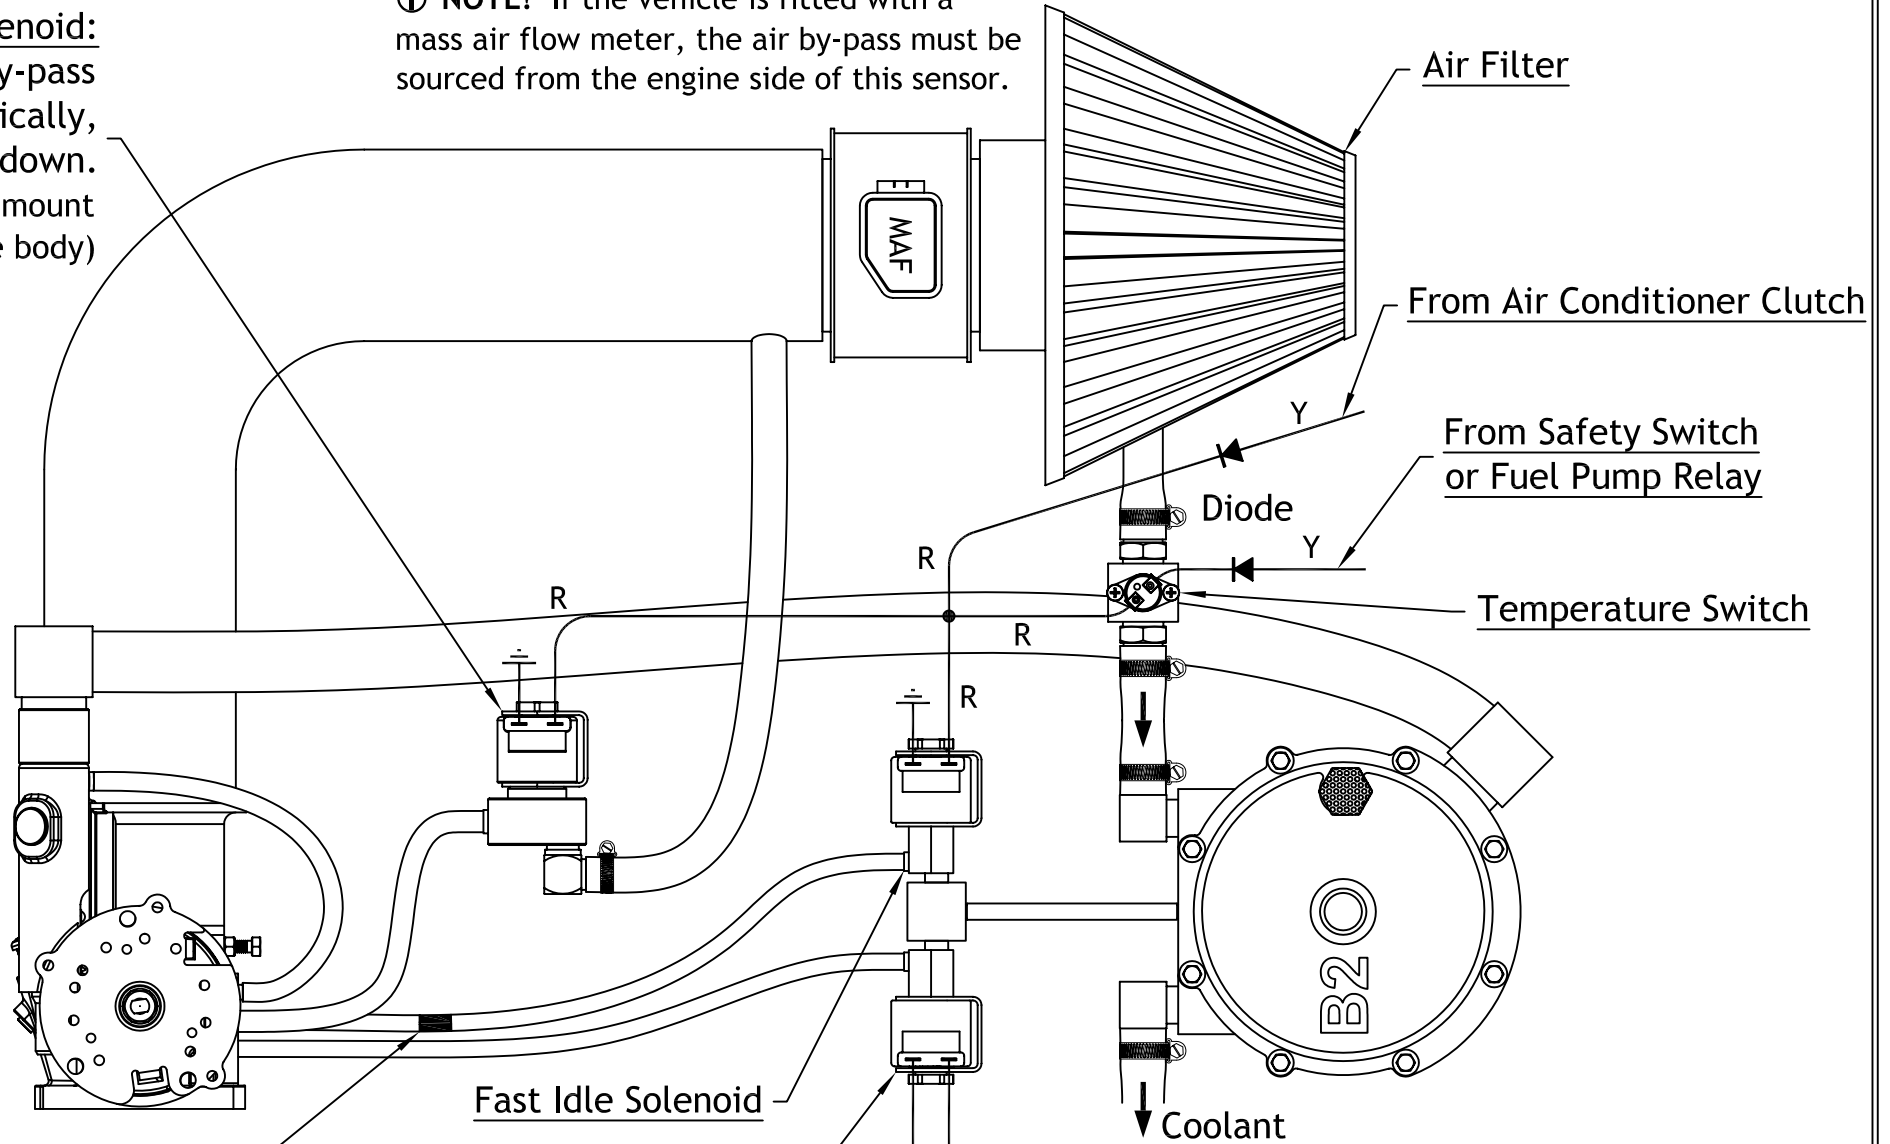

Jet in hose for correct mixtures with both air by-pass and primer solenoid energised

TITLE
FAST IDLE CONTROL - WITH C.T.I.



DATE 18/06/04	PART NO HAR-FIWCTI	DRAWING NO IN-0014	DRAWN BY S.VALLELY	SHEET 1 / 1
------------------	-----------------------	-----------------------	-----------------------	----------------